



**Insert SIM**

Do not be alarmed. You have a dual SIM phone with only one SIM. You will always see "Insert SIM" as long as the second SIM tray is empty

**Center Pad**

The edge moves your cursor while in the menu  
Pressing the pad is Yes or Enter

**Selection Key**

Selects the option in the bottom right of the screen

**Power On/Off - Depress**  
**Hang up - Push Once**

**Unlock**

Press the top left Selection Key and then the \* key to unlock the keypad

**Selection Key**

Selects the option in the bottom left of the screen

**Talk Key**

Send or Answer a call

**Questions about your Nobux Phone?**

**Contact Nobux support at**

**1 (844) 696 6289**