



Insert SIM

Do not be alarmed. You have a dual SIM phone with only one SIM. You will always see "Insert SIM" as long as the second SIM tray is empty

Center Pad

The edge moves your cursor while in the menu
Pressing the pad is Yes or Enter

Selection Key

Selects the option in the bottom right of the screen

Power On/Off - Depress
Hang up - Push Once

Unlock

Press the top left Selection Key and then the * key to unlock the keypad

Selection Key

Selects the option in the bottom left of the screen

Talk Key

Send or Answer a call

Questions about your Nobux Phone?

Contact Nobux support at

1 (844) 696 6289